

# Contents

1 Overview	
2 Product	2
2.1 ANPR Wiegand Camera	2
2.2 Specification	2
3 Configuration	3
3.1 Image Settings	
3.2 ANPR settings	
3.3 Wiegand protocol configuration	
3.4 Connection with Net2 ACU	
3.5 Viewing the ANPR capture in Net2	7
4 Appendix	9
4.1 ANPR Installation	9
4.2 Installation angle	





# Configuración de HIKVISION ANPR para Paxton Net2

## 1 Descripción general

El documento se utiliza principalmente para presentar cómo instalar Hikvision ANPR Wiegandcamera y conectarse con el software Paxton Net2 para administrar el reconocimiento de matrículas del vehículo.

## 2 Product

## 2.1 ANPR Wiegand Camera

Model number: DS-2CD4A26FWD-IZS/P-WG (2.8-12mm) DS-2CD4A26FWD-IZS/P-WG (8-32mm) DS-2CD4A26FWD-LZS/P-WG (2.8-12mm) Firmware version: V5.4.5 build171116

## 2.2 Especificación



- 1/1.8"Progressive Scan CMOS
- 1920×1080@ 60fps
- Ultra-low light
- Auto-iris
- 120dB WDR
- IP67
- IR and white light, optional
- ANPR technology





## **3** Configuration

## 3.1 Image Settings

Hay dos modos en la cámara ANPR, Carretera y Normal, de la siguiente manera, Se recomienda utilizar el Modo Carretera para monitorear el tráfico por carretera, o si el entorno externo es demasiado oscuro por la noche, también se recomienda el Modo Carretera, como se muestra a continuación, Imagen





Además, también puede modificar / configurar manualmente los parámetros de la imagen de acuerdo con diferentes escenarios, como se muestra a continuación, Figura 1.

Vehicle speed(km/h)	Exposure time(s)	Gain	WDR and BLC
5	1/100	20	OFF
40	1/500	20	OFF
100	1/1000	20	OFF
200	1/2000	20	OFF

Figure 1

**Note:**La tabla es solo para referencia. La configuración puede ser diferente para diferentes escenarios.

## **3.2 ANPR settings**

Configuración-> Configuración avanzada-> Tráfico por carretera-> Marque la casilla " Habilitar" para habilitar la función ANPR, y haga clic y arrastre la línea amarilla para establecer la posición, ajuste la relación de zoom de la cámara para que el tamaño del vehículo en el La imagen está cercana a la del marco rojo, Imagen 2.







## 3.3 Configuración del protocolo Wiegand

Configuración-> Sistema-> Dispositivo externo-> Tipo Wiegand, elija Paxton 26bit y guárdelo, de la siguiente manera,

HII	<b>(VISION</b>	Live View	Playback	Pic	cture	Configu	iration		1 admin	🕜 Help	E Logout
Q	Local	Basic Information	Time Settings	DST	RS-232	RS-485	External Device	About Device			
	System	Wiegand Type	Paxtor	n 26bit		~					
	System Settings										
	Maintenance	🗎 s	ave								
	Security										
	User Management										
O	Network										
<u>Q</u>	Video/Audio										
1	Image										
	Event										
	Storage										
Fa	Road Traffic										
						©2	017 Hikvision Digital T	echnology Co., Ltd. All Rights Reserved.			

Pic 3

## 3.4 Connection with Net2 ACU

### Step 1,

Las conexiones para la cámara ANPR y el puerto del lector mediante un cable lector Belden

#### Headquarters





(según la especificación de Paxton) en Net2 ACU son los siguientes:

Blue wire: D1 at ANPR – Clock/D1 on Net2 ACU Reader Port Yellow wire: D0 at ANPR – Data/D0 on Net2 ACU Reader Port Black wire: GND at ANDR - Ov on Net? ACLI Reader Port



## Step 2,

En la configuración de la puerta para la ACU que se conectará a la cámara ANPR, configure la puerta de la siguiente manera y aplique:





ACU serial number: 04861892					
Door name	HikVision ANPR				
Door group	[none]				
Door open time	2 + seconds				
Unlock the door during	At no time				
	Only unlock the door once a user has been granted access				
Unlock relay 2 during	At no time				
Reader details Name	HikVision ANPR (In)				
Name	HikVision ANPR (In)				
neader type	ANPR - 25 bit Wiegand reader				
K as seen as the second s	None				
Кеураа (уре					
Neypad type Token data format	ANPR - 26 bit Wiegand				
Neypad type Token data format Operating mode	ANPR - 26 bit Wiegand				
Neypad type Token data format Operating mode Reader operating mode	ANPR - 26 bit Wiegand				
Neypad type Token data format Operating mode Reader operating mode Timed operating modes - This	ANPR - 26 bit Wiegand				
Neypad type Token data format Operating mode Reader operating mode Timed operating modes - This During this timezone:	ANPR - 26 bit Wiegand  Token only allows for different reader operation during a selected timezone.  All day, every day				
Token data format Operating mode Reader operating mode Timed operating mode Unring this timezone: This reader will operate as:	ANPR - 26 bit Wiegand  Token only s allows for different reader operation during a selected timezone.  All day, every day				
Neypad type Token data format Operating mode Reader operating mode Timed operating modes - This During this timezone: This reader will operate as: Reader action - This is what will H	ANPR - 26 bit Wiegand  Token only s allows for different reader operation during a selected timezone.  All day, every day				

### Step 3,

En el registro de usuario, seleccione la pestaña "Tokens" y seleccione "Nuevo token" para abrir la ventana "Agregar nuevo token":



Step 4,

- Seleccione "Placa de número de vehículo" e ingrese el número de placa de matrícula que desea agregar para el usuario; p.ej. BR07 UMM
- Click OK then Apply. ٠





• A medida que la cámara ANPR lea la placa de licencia, enviará el número de token convertido a la Net2 ACU.

Events							
1	Date/time	User	Token number	Where	Event	Details	
-	07/07/2017 13:51:28	Wrench, Chris		HikVision ANPR (In)	Access permitted - ANPR	BR07UMM	
-0	07/07/2017 13:51:23	Wrench, Chris		HikVision ANPR (In)	Access permitted - ANPR	BR07UMM	
-	07/07/2017 13:51:17	Wrench, Chris		HikVision ANPR (In)	Access permitted - ANPR	BR07UMM	
-	07/07/2017 13:51:11	Wrench, Chris		HikVision ANPR (In)	Access permitted - ANPR	BR07UMM	

## 3.5 Visualización de la captura ANPR en Net2

Hikvision tiene una segunda integración con Net2 que permite a los usuarios ver el video DVR / NVR desde la interfaz de usuario de Net2. Esta integración se puede utilizar junto con la cámara ANPR para mostrar la captura de la matrícula a medida que la cámara la lee.

- Descargue el complemento desde aquí: <u>ftp://Hik Paxton:Paxton Hik@ftp.hikvision.com</u>
- Una vez instalado, en Net2 vaya a Opciones> Integración de cámara> Agregar y seleccione Sistema DVR Hikvision de la lista de servidores de cámara.

🎭 Options				x
<u>G</u> eneral <u>D</u> epartments	Door groups	Repor	t groups	Field <u>n</u> ames
Landlord Tenant permissions	Card printing	Activation	Multizone Intru	der integration
<u>I</u> oken types Token o	lata <u>f</u> ormats	Custo <u>m</u> days	<u>C</u> amer	a integration
Add a camera clicking the 'A	erver pe of camera server th	hat you wish to ad	d.	Add Delete
Connection ( Host name User name Password CR-N-NOOU Milestone XProtect DrSI	elVu em			Kename
Cameras Pelco Endura			<b>.</b>	
2) Please enter a frien	dly name for this serve	er		
		OK	Cancel	Detect
		ОК	Cancel	Apply

Agregue las credenciales de DVR para autenticar y detectar las cámaras asociadas:





o Options					Lx
<u>G</u> eneral [	epartments	Door groups	Report grou	aps	Field <u>n</u> ames
Landlord Tenant perm	issions Card <u>p</u>	rinting <u>A</u> c	tivation N	fultizone Inti	ruder integration
<u>I</u> oken types	Token data <u>f</u> orm	ats C	usto <u>m</u> days	<u>C</u> ame	era integration
Add a camera server by clicking the 'Add' button	Hikvision DV	R System			Add Delete Rename
Connection details					
Host name	(e.g. 192.168.0.10	) 10.10.40.19		Port	8000
User name		admin			
Password		*****		-	
Cameras					
Camera ID	Name				•
🖳 Camera1	Camera (	1			
🖳 🖳 Camera2	Camera (	2			
Real Camera 3	Camera (	3			
Real Camera4	Camera (	4			
🔎 Camera 5	Camera (	5			Ŧ
			Delete	ename	Detect
			ОК	Cancel	Apply

Haga clic en Aceptar, luego vaya a la ACU que está asociada con la cámara ANPR y • selecciónela como la cámara que está monitoreando la puerta:

Reader 1 Reader 2 Alarm	Codes   Events   Fire alarm inputs	Multizone Intruder/Texecom integration A	ccess rights	Camera integration
Please select the cameras that	t monitor this door			
Camera name	Camera server	Camera type		
Camera 01	Hikvision DVR System	OEM DVR Supplier		
Camera 02	Hikvision DVR System	OEM DVR Supplier		
Camera 03	Hikvision DVR System	OEM DVR Supplier		
Camera 04	Hikvision DVR System	OEM DVR Supplier		
Camera 05	Hikvision DVR System	OEM DVR Supplier		
Camera 06	Hikvision DVR System	OEM DVR Supplier		
Camera 07	Hikvision DVR System	OEM DVR Supplier		
🗖 Camera 08	Hikvision DVR System	OEM DVR Supplier		
🗖 Camera 09	Hikvision DVR System	OEM DVR Supplier		
Camera 10	Hikvision DVR System	OEM DVR Supplier		
Camera 11	Hikvision DVR System	OEM DVR Supplier		
Camera 12	Hikvision DVR System	OEM DVR Supplier		
Camera 13	Hikvision DVR System	OEM DVR Supplier		
Camera 14	Hikvision DVR System	OEM DVR Supplier		
Camera 15	Hikvision DVR System	OEM DVR Supplier		
Camera 16	Hikvision DVR System	OEM DVR Supplier		
✓ IPCamera 06	Hikvision DVR System	OEM DVR Supplier		
1				

•A medida que la cámara ANPR genera eventos en Net2, aparecerá un icono de cámara a continuación.

al evento. Al hacer clic en el icono, se mostrará el video asociado con el evento ANPR.

Charles and the second state of the second sta				
07/07/2017 13:51:23 Wrench, Chris	HikVision ANPB (In)	Access permitted - ANPR	BR07UMM	6 <u></u>
07/07/2017 13:51:17 Wrench, Chris	HikVision ANPR (In)	Access permitted - ANPR	BR07UMM	11. X
- 07/07/2017 13:51:11 Wrench, Chris	HikVision ANPR (In)	Access permitted - ANPR	BR07UMM	$c_{\overline{X}}$





## 4 Appendix

## **4.1 ANPR Installation**



The vertical angle should not exceed 30  $^{\circ}$  Installer can calculate all the necessary distance using trigonometric functions X - the height of the camera installation

Y - the distance between the camera and the car, hoping the ground (place of measurement)

So, for simplicity it can be assumed :

Y=X/tan(30°)

Y=1.7\*X



## 4.2 Installation angle

Cuando se asegure de que la cámara esté configurada correctamente y que el mejor campo de visión esté configurado con la lente, asegúrese de que el ángulo de inclinación de la placa con respecto al plano horizontal no sea superior a 5 grados, de lo contrario obtendrá una lectura deficiente o incorrecta.





Este camino es cuesta arriba y con una curvatura adversa, lo que provoca un desplazamiento de la placa al plano horizontal; esta placa aún se lee perfectamente bien, pero con algo más que esto podría haber problemas, así que revise su escena de antemano.



