

Referencias del diagrama

- 1 Apariencia**
- ① Micrófono
 - ② Cámara
 - ③ Piloto
 - ④ Botón
 - ⑤ Área de lectura de tarjetas
 - ⑥ Altavoz
 - ⑦ Terminales
 - ⑧ Puerto de depuración
 - ⑨ MANIPULACIÓN
 - ⑩ Tornillo de presión
 - ⑪ Ranura para tarjeta TF
 - ⑫ Interfaz de red

Nota: el aspecto del dispositivo varía en función del modelo. Remítase al dispositivo en cuestión.
 Descripción del indicador
 Desbloquear: Verde Llamar: naranja Comunicar: blanco

2 Terminal y cableado

Nota: Para ver una descripción del cableado, consulte el manual de usuario.

3 Accesorio de instalación

Nota: consulte el manual de usuario para ver las dimensiones de los accesorios de instalación.

4 Instalación

Antes de comenzar

- Asegúrese de que el dispositivo incluido esté en buenas condiciones y se incluyan todas las piezas de ensamblaje.
- Asegúrese de que todos los equipos relacionados estén apagados durante la instalación.
- Consulte las especificaciones del producto al realizar la instalación.

Nota: Nota: consulte las ilustraciones y el manual de usuario para conocer el procedimiento de instalación.

5 Configuración

Activar dispositivo

1 Antes de poder utilizar el dispositivo es necesario activarlo estableciendo una contraseña segura.

Actívalo a distancia a través de la página web o el software de cliente iVMS-4200.
 Configuración remota
 Nota: consulte el manual de usuario para ver la configuración.



1. Power on the device, and connect the device to the network.
2. Enter the IP address into the address bar of the web browser, and click Enter to enter the activation page.
 Note: The computer and the device should belongs to the same subnet.
3. Create and enter a password into the password field.
4. Confirm the password.
5. Click OK to activate the device.
 Note: When the device is not activated, the basic operation and remote configuration of device cannot be performed.

- 2 Access to the Device by Web Browsers
 1. In the browser address bar, enter the IP address of the device, and press the Enter key to enter the login page.
 2. Enter the user name and password and click Login.

- 3 Communicate with Indoor Station
 1. Click Settings -> Intercom -> Press Button to Call to enter the settings page.
 2. Set the parameters.
 - Edit call No. for every button.
 - Check Call Management Center to set the button calling center.

Note: If you check Call Management Center and set the call No. as well, call management center has higher privilege than call No.
- 4 Issue Card
 1. Click Settings -> Access Control and Elevator Control to enter the settings page.
 2. Click Issue Card. Present the card on the card reading area.
 3. When issuing finished, the windows pop up on the settings page.

Note:

 - Only Mifare card supported, and Mifare card with non-standard shape is recommended.
 - Up to 10000 cards can be issued and managed by V series door station. A voice prompt (No more cards can be issued.) can be heard when the issued card amount exceeds the upper limit.

- 5 Unlock Door

After issuing cards, you can unlock the door by presenting the issued cards.

Refers to Video Intercom Villa Door Station User Manual (scan the QR code) for details.

The simplified declaration of conformity
 Hereby, Hangzhou Hikvision Digital Technology Co., Ltd. ("Hikvision") declares that the DS-KV6113-WPE1 device complies with the requirements of Directive 2014/53 / EU of the European Parliament and of the Council of April 16, 2014 on the harmonization of the laws of the Member States relating to making radio equipment available on the market and repealing Directive 1999/5 / EC. The full text of the declaration of conformity is available at the Hikvision website <http://www.hikvisioneurope.com/portal>

Industry Canada ICES-003 Compliance
 This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.
 For RED-Directive 2014/53/EU
 The frequency, mode and the maximum transmitted power in EU are listed below:

Model	Received frequency	Transmitted frequency	Bandwidth	Frequency power
DS-KV6113-WPE1	2.4 to 2.4835GHz	2.4 to 2.4835GHz	20 to 40MHz	802.11b:16dBm +/- 1.5dBm
				802.11g:15dBm +/- 1.5dBm
				802.11n(ht20):14dBm +/- 1.5dBm
				802.11n(ht40):12dBm +/- 1.5dBm

