


Wi-Fi NVS Kit Quick Start Guide

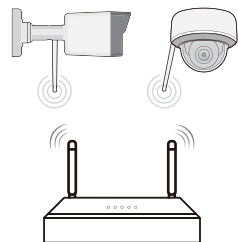


Operation Video



Hik-Connect App


Hikvision Official Website
www.hikvision.com

1 Connect Network Cable & Micro SD Card

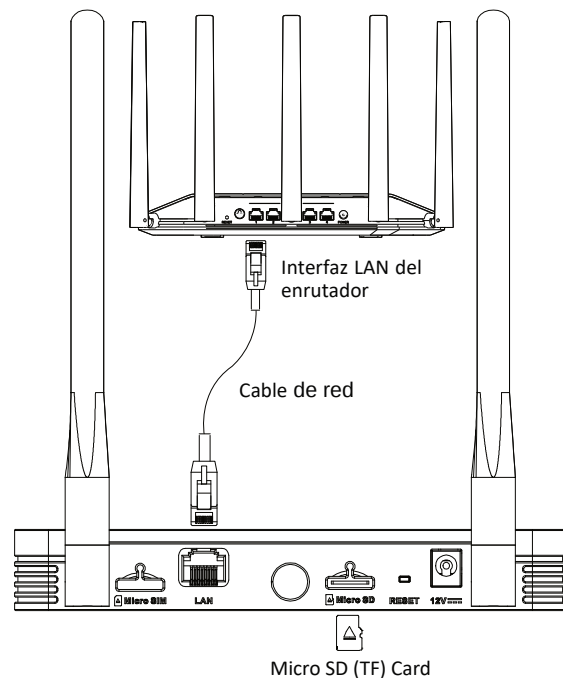


1

2 Encienda Video Serve

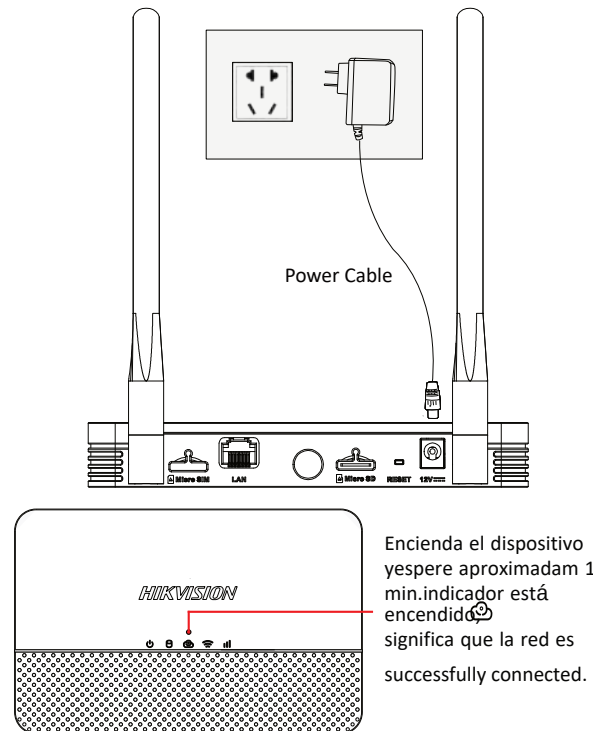

2

3 Encienda las camaras de Reds

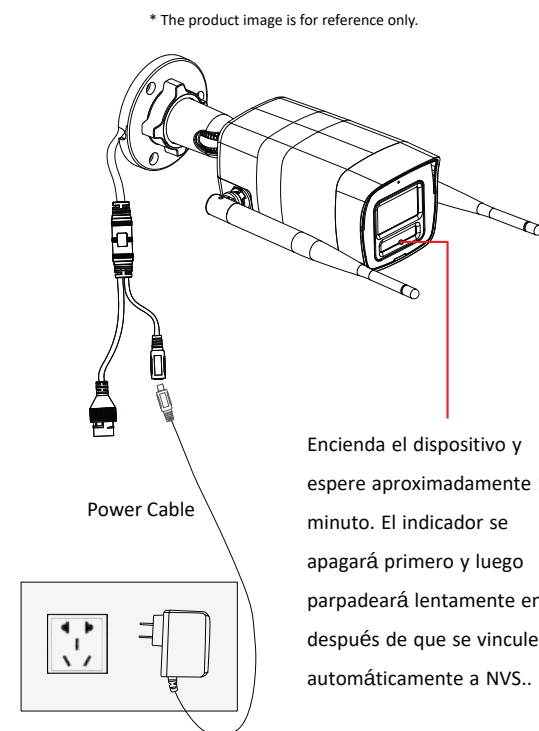



3

4 Agregue Video Server al Hik-Connect


Step 1 Escanee el código QR para descargar la aplicación Hik-Connect.



Step 2 Utilice Hik-Connect para escanear el código QR del dispositivo en la etiqueta.

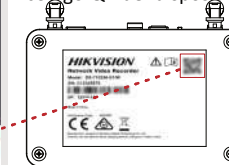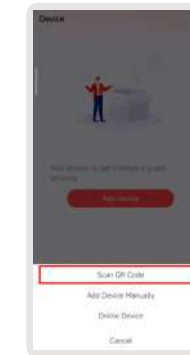


Step 3 Follow the instructions to bind your device.

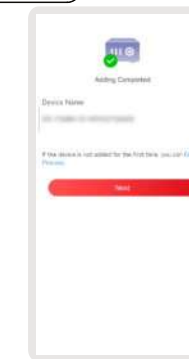

4

5 Enlace las camaras al VideoServidor

Asegúrese de que la red del dispositivo esté conectada y que las cámaras de red estén cerca.

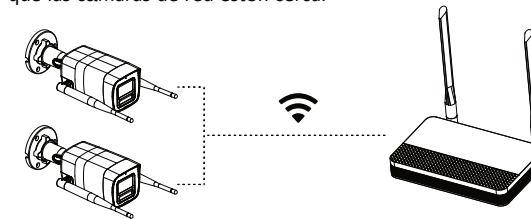


Las cámaras se vincularán automáticamente.




5

6 Install Cameras


1 Ceiling Mounting

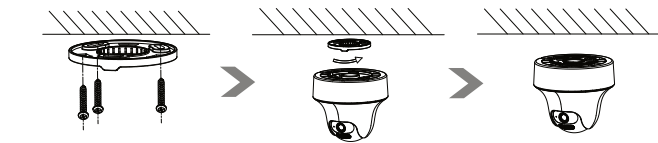


Wall Mounting

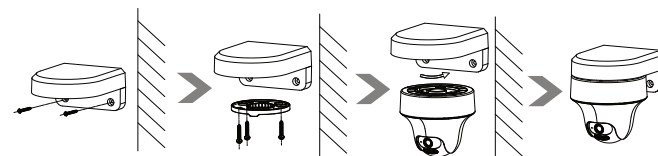

2 Ceiling Mounting

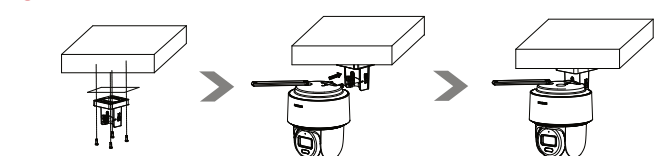


Wall Mounting

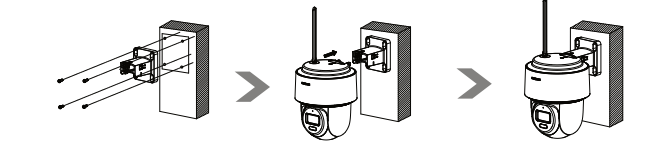


6

3 Ceiling Mounting

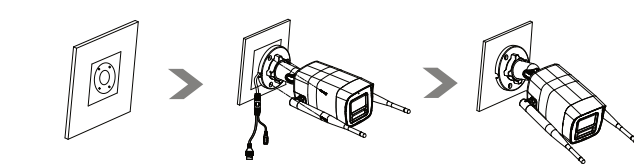

Wall Mounting

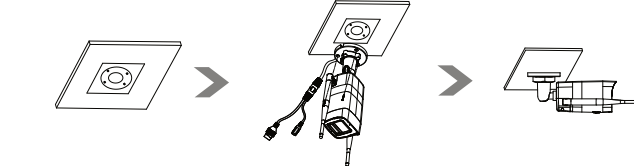


After installation, check the status indicator.

- **Solid Red:** Camera is starting up.
- **Slow-flashing Red:** Wi-Fi connection failed.
- **Fast-flashing Blue:** Camera ready for Wi-Fi connection.
- **Slow-flashing Blue:** Camera running properly

7

A Descripción indicadores

Encienda su dispositivo y espere unos 60 segundos. Si cada indicador es igual a la descripción a continuación, entonces su dispositivo se ha iniciado correctamente.

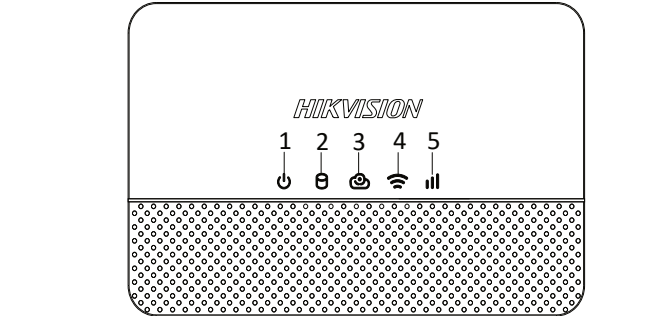

No.	Indicator	Description
1	Power	Será sólido después de conectar la fuente de alimentación.
2	SD Card	Será fijo o parpadeará después de insertar la tarjeta SD.
3	Online	Estará fijo cuando la red esté funcionando correctamente.
4	Wi-Fi	Será sólido o parpadeará.
5	4G	4G no está disponible para su dispositivo y este indicador no funcionará.

8

B FAQ

1. Why the device cannot be bound with Hik-Connect?

- Ensure the network cable is connected.
- Ensure the device online indicator is solid on, and the device has not been bound with another account.
- If this problem still exists, please scan the QR on cover to view the operation video.

2. Why cameras cannot be connected?

- For the first time to add a camera, please wait for the camera to start up. It would take about 30 to 40 seconds. The camera indicator would flash blue rapidly (on for 0.2 sec and off for 0.2 sec).
- Check the distance between the device and camera. The distance is suggested to be within 200 meters in an open area.
- If the camera indicator flashes normally but connection still failed, please press the camera reset button for about 5 seconds, and try again after the camera starts up.
- If this problem still exists, please scan the QR on cover to view the operation video.

3. Why is there no image during live view?

- Check the distance between the device and camera. The distance is suggested to be within 200 meters in an open area.
- Ensure the device online indicator is solid on.
- If this problem still exists, please scan the QR on cover to view the operation video.

9

4. How to restore the device or camera to factory default settings?

- Press the device reset button for about 5 seconds until all indicators are off, and the power indicator flashes afterwards, then would the device be restored.
- Press the camera reset button for about 50 seconds.

5. When to use Hik-Connect to bind with the device?

You can use Hik-Connect to scan the device QR code and bind with your device when the online indicator is solid on.

6. How to insert Micro SD (TF) card, or is it necessary?

Micro SD (TF) card is used to store videos, and it is necessary. Please turn to page 1 to view the instruction of how to insert the card.

7. How to play back videos?

Go to the home page of Hik-Connect app, and select a device, then tap **Playback** or an event message to play back videos.

C Safety Instructions

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- Firmly connect the plug to the power socket. Do not connect several devices to one power adapter. Power off the device before connecting and disconnecting accessories and peripherals.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- For the device with the sign indicating hazardous live, the external wiring connected to the terminals requires installation by an instructed person.
- This equipment is not suitable for use in locations where children are likely to be present.



1. Do not ingest battery. Chemical Burn Hazard!
2. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
3. Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).
4. Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.

10

5. Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
6. Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.
7. Dispose of used batteries according to the instructions.
- If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.
- Use the device in conjunction with an UPS, and use factory recommended HDD if possible.
- For the device with fan blades or motors, keep body parts away from fan blades or motors. Disconnect the power source during servicing.
- Do not touch the bare components (such as the metal contacts of the inlets) and wait for at least 5 minutes, since electricity may still exist after the device is powered off.
- Never place the device in an unstable location. The device may fall, causing serious personal injury or death.
- If the device uses a 3-prong power supply plug, it must be connected to an earthed mains socket-outlet properly.

D Preventive and Cautionary Tips

•El dispositivo no deberá quedar expuesto a goteos o salpicaduras de agua, ni a objetos llenos de líquidos, comoLos jarrones se colocarán sobre el dispositivo. •Se deben colocar fuentes de llamas no desnudas sobre el dispositivo, como velas encendidas. •Para el dispositivo con aberturas de ventilación, las aberturas de ventilación no deben impedirse cubriendo las aberturas de ventilación nunca deben bloquearse colocando el dispositivo sobre una cama, un sofá, una alfombra u otra superficie similar. •El puerto USB del equipo se utiliza para conectarse a un mouse, teclado, unidad flash USB o Wi-Fi dongle únicamente. La corriente para el dispositivo conectado no debe ser superior a 0,1 A. • Bajo temperaturas de trabajo altas (de 40 °C (104 °F) a 55 °C (131 °F)), la potencia de algunos adaptadores de corriente puede disminuir. •Si es necesario instalar el dispositivo en la pared o en el techo, 1. Instale el dispositivo de acuerdo con las instrucciones de este manual. 2. Para evitar lesiones graves, este dispositivo debe estar fijado de forma segura a la superficie de instalación de acuerdo con las instrucciones de instalación. •Si se proporciona un adaptador de alimentación en el paquete del dispositivo, utilice únicamente el adaptador proporcionado. •Si el dispositivo necesita ser cableado por usted mismo, seleccione el cable correspondiente para suministrar energía de acuerdo con el cable con un pelacables estándar en la posición correspondiente. Para evitar consecuencias graves, la longitud del cable pelado debe ser adecuada y los conductores no deben quedar expuestos. •Asegúrese de que se haya desconectado la alimentación antes de cablear, instalar o desmontar el dispositivo. •El dispositivo debe colocarse en un ambiente seco sin gases corrosivos (consulte el manual del usuario para detalles sobre gases corrosivos).

11