

HIK	VIS	<b>ION</b> °
🐨 ROSARIO SEGURIE	DAD 💦 SOCIO	DISTRIBUIDOR

Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	1 of 10

#### Preparation

- 1. DS-PEA1-21 Panic Alarm Station
- 2. HikCentral V1.3.0

#### **DS-PEA How to configure in HikCentral**

When you want pop-up windows in HikCentral Client, you need configure something by HikCentral website and Client.

#### 1. Check the license for Alarm input number and Alarm module.

License	>	<
License Details License List		
Authorization Details	Details	
Camera(Exclude Cameras Imported from Site)	1/100	
Access Point	0/50	
Alarm Input (Security Control Device)	3/2048	
Recording Server	1/64	
Remote Site()	0/5	
UVSS	0/4	
ANPR	Enabled	
Smart Wall	Enabled	-
Please properly keep your activation code. Deactivate otherwise the activation code cannot be used any more otherwise the activating the activation code	the VSM if you need to uninstall the VSM, e.	
	Close	

# **HIKVISIO**N

Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	2 of 10
			~		
	License		~		
	License Details License List				
	Authorization Details	Details			
	GIS Map	Enabled	~		
	Alarm	Enabled			
	Access Control	Enabled			
	Attendance	Enabled			
	Face Comparison	Enabled			
	People Counting	Enabled			
	Queue Analysis	Enabled			
	Temperature Analysis	Enabled	~		
	Please properly keep your activation code otherwise the activation code cannot be	e. Deactivate the VSM if you need to uni used any more.	nstall the VSM,		
			Close		

## 2. Add DS-PEA1-21 Panic Alarm Station to HikCentral.

## 1. Choose Physical View

to	Remote Site Management	Physical View	Logical View	Event & Alarm
	Access Level	Time & Attendance	Person	Vehicle
	Security	کې System		





Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device				3 of 10

HIKVISII

#### 2. Choose Security Control Device, add device IP to HikCentral

🔶 Hil	kCentral Web Client				
ŵ	Encoding Device	Add Security Cont	rol Device		
$\bigcirc$	Access Control Device	J	Dert Segment		
-	Security Control Device		Batch Import		
€	Recording Server	Basic Information			
	Streaming Server	* Device Address	10.9.96.174	0	1
	Smart Wall	* Device Port	8000		1
		* Alias	10.9.96.174	0	_
Ę		* User Name	admin		2
		* Password	•••••		
EO			Weal	C	3
ţ		Channel Information			
2		1 Add Channel to Area			
r1		i * Channel	All Channels		
			<ul> <li>Specified Alarm Input</li> </ul>		
Ð		* Area	Oreate Area by Device Name		
¥			<ul> <li>Existing Area</li> <li>4</li> </ul>		
202					
			Add Add and C	Continue	Cancel

#### 3. Configure Map.

- 1. Choose Logical View.
- 2. Choose Alarm Inputs.
- 3. Click Alarm in 3, and add the Alarm in point to map.





HIKVISIOM



Title:	itle: DS-PEA How to configure in HikCentral		v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device				5 of 10

HIKVINII

### 4. Configure Event and Alarm (Pop-Up) .

- 1. Choose Event & Alarm.
- 2. Choose Alarm.
- 3. Choose Alarm Input----Alarm Input----Device----Alarm in 3.



- 4. Choose Related Cameras----- Device Camera----Configure Storage Location
- 5. For Display Video type you can choose Recorded Video or Live View.



	H		K	V	7	5	/	0	Λ	/8
18	ROSA	RIO S	EGURI	DAD .	N S	0010	DIS	TRIBU	JIDOF	

Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device	Page:	6 of 10		

C Add Alarm				
() Related Cameras	<b>1</b>	1		
* Camera	Up to 16 cameras ca	an be selected for lir	nkage.	
	+ Add 👖 Delete	All		
2	Camera	Area	Storage Location	Operation
2	Camera1_10.9.96.1	10.9.96.174	Main Storage_10.9.96.174 🔹	$\times$
* View Pre-Alarm Video	3s	• corded video files b	efore the alarm, you can view the video recor	<b>3</b> ded from periods preceding the
* Post-record	15s	-		
() * Lock Video Files for (Day)	0			
* Display Video by Default	Recorded Video Wh	nen Alarm Occurred		
	Live View		4	

- 6. Click Related Map-----choose Map.
- 7. Click Trigger Pop-up Window.

Related Map     Map Name/Area Na     I	ame 2
1 Trigger Pop-up Window 🗹	
Display on Smart Wall	3
Restrict Alarm Handling Time	
Trigger Audible Warning	
Save	Cancel





Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device		Page:	7 of 10	

## 5. Configure HikCentral Client.

1. Choose Alarm Center.

🚸 HikCentral Control Client				14 🛃 💭 🔀 admin ~ 17:11:0:	7 UTC+08:00 🔒 — 🗆 🗙
My Dashboard					
Surveillance	Investigation	Video Analysis	Maintenance	Tool	Management
	E	041	-~	Smart Wall	Download Center
Monitoring	لے۔ Alarm & Event Search	7 YIII People Analysis	Health Monitoring	VSPlayer	Local Picture
				F Broadcast	Local Recording
Ä			ĒO	Alarm Output Contro	ol System
Alarm C Alarm Center	Video Search	Heat Map	Audit Trail	Two-Way Audio	Help
	[DR925] Vehicle Search	Temperature			
	Access Control	Vehicle Analysis			

2. Enable Pop-up Window.

💠 HikCentral Control Client			tt ∓ Û	admin ~ 17:11:39 UTC+0	8:00 🗛 — 🗆 🗙
ি Alarm Center ∽		[	Display Related Video & Map ~ Oper	ation ~ 🛛 🕞 Triggering Event	$\oplus$ Arming Control $\square$
All • Mark Status	<ul> <li>Alarm Priority - Alarm Status -</li> </ul>	ିର୍ଯ୍ History Alarm	Alarm Displayed on Smart W	ludio On Pop-up Window Disabled	Unacknowledged: 0
Mark Alarm Name Alarm Priority	Alarm Time (Contr   Alarm Source	Area	Triggering Event/Alarm	Alarm Status Operation	
			Enable	Pop-up	
			Ellable	rop-up	
Related Video		🖸 Relate	d Map		Ľ
i da					
1				TT	
				4	
		1			
2019/02/	4 17:11:33	🖃 24h 王			
Go to Alarm Time Live View Display	on Smart Wall	Stop			





Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	8 of 10

#### 6. Test Pop up.

- 1. Test Trigger Alarm by HikCentral Website.
- 2. You can see the HikCentral Client pop-up window (Include Video and Map).

🔶 н	ik <b>Central</b> Web Client							Site Map   Hi,adr
ŵ	System-Monitored Event				*i			
~	Consis Front		te All Invalid items 🕑 Enable All	🕒 Disable All 👘 🖓 🥹 Alarm Seti	ungs			
$\forall$	Generic Event	Alarm Name	Source	Triggering Event	Alarm Priority	Status	Operation	
ADA	User-Defined Event	Alarmin 3 10.9.96.174-Alar	Alarmin 3 10.9.96.174	Alarm Input	High	Enabled	R @	Θ×
顀	Alarm							0 1
	Aldilli							
					Test Tri	nder Aları	m 🖊	







Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device		Page:	9 of 10	

#### Notice

If you press the Panic button in the Device, and then click answer. Shows **Two-way audio failed Error Code: Control Client, Audio Intercom.dll[6]** 

**Reason: The Client PC don't have audio input and output.** You need connect sound and microphone.

HikCentral Cor	ntrol Client			↑↓ ⊥	🗘 🖸 admin×	18:51:34 UTC+08:00 👌 — 🗆 🗙
☆ │ Alarm Center	8	~		Display Related Video & Map 🗸	Operation 🗸 🗔 Trig	ggering Event 🕀 Arming Control 🛛
All		le Cénture - Alance Duianites - Ala	en Chatura I Q Lici I	u		×
Mark   Alarm Na	Alarm Information		17			Two-way audio failed Error
P Alarmin 3	Alarmin 3	_10.9.96.174-Alarm Input	Video	Мар		Code: Control Client, AudioIntercom.dll [6]
	Alarm Time:	2019-02-14 18:51:15				
	Alarm Time (VS	2019-02-14 18:51:15				
	Triggered by:	Alarmin 3_10.9.96.174		019 Thu 18.53.21		
	Triggering Event:	Alarm Input_Panic Alarm	Ĩ,	015 1110 10.55.21		
	Description:					
Related Video						Z
	Alarm Status:	Start, Unacknowledged				
	Alarm Priority:	High -				
	Alarm Category				1000	
	Alarin Category.					1000
	Remark:					
				-	Camera	01
Der D.			Go to Alarm	Time Live View Display on Sma	rt Wall	Stop
100 A						
	Acknowledge	Answer Ignore	I/O Operation		🗹 Enable Pop-up Win	ndow < >
06:00						
	≪ 1x ≫					
Go to Alarm Time	Live View	Display on Smart Wall	Stop			





Title:	DS-PEA How to configure in HikCentral	Version:	v1.0	Date:	14/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	10 of 10

## First Choice for Security Professionals *HIKVISION* Technical Support