

HIKVISION °
ROSARIO SEGURIDAD SOCIO DISTRIBUIDOR

Title:	How to configure Local Recording	Version:	v1.0	Date:	11/09/2018
Product:	DS-PEA Series Emergency Alarm Device			Page:	1 of 6

Preparation

- 1. DS-PEA1-21 Panic Alarm Station
- 2. SD card
- 3. iVMS-4200

How to configure Local Recording

When you want record video when panic button is pressed, you need configure something by iVMS-4200.

1. Synchronization the time First.

		Remote Configuration			*
- 🗞 Device Information	Configuring the Time Setting	gs (e.g., NTP, DST)			
Device Information	Time Zone				
🔅 Time	Select Time Zone:	(GMT+08:00) Beijing, Hong	g Kong, Perth, Si	ingapore, Taipei 🗸	
🕂 💰 System	Enable NTP				
🛨 💰 Network	Server Address:	10.6.92.105			
🐮 🍘 Input Settings	NTP Port:	123			
+ C Output Settings	Sync Interval:	60	Mir	nute(s)	
🔹 🕤 Storage	Enable DST				
+ C Image	Start Time:	April 🗸 First Wee	ek 🗸 S	Sun y 2 A	00
+ Alarm Mananement	End Time:	October v Last Wee	ek 🗸 S	Sun 🗸 2 👘	00
+ 🗞 CCD	DST Bias:	60 min 🗸			
	Synchronization				Save





Title:	How to configure Local Recording	Version:	v1.0	Date:	11/09/2018
Product:	DS-PEA Series Emergency Alarm Device			Page:	2 of 6

2. Insert SD card and check the storage of SD card, if need, format the SD card.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>





Title:	How to configure Local Recording	Version:	v1.0	Date:	11/09/2018
Product:	DS-PEA Series Emergency Alarm Device			Page:	3 of 6

3. Select the Local Recording and configure Recording Schedule.

Device Information	Configuring the Recording Schedule		
Device Information			
Time	Camera: Camera1	~	
System	Record		
Network	I local Ben	rding	
Input Settings			
 Output Settings 	Recording Type: Main Stream	~	
Storage	Recording Schedule: Template01		
🔊 Image	Adva	nced Settings	
Event	Copy To		Save
Schedule			
💰 Alarm Management			
🗞 CCD			
	Remote Config	rration	×
Device Information	Remote Configu	ration	x
Orice Information Device Information	Remote Config Configuring the Recording Schedule	ration	×
Cevice Information Device Information Device Information Time	Renote Configu Configuring the Recording Schedule Camera: Camera1 Record	ration	×
Device Information Device Information Device Information Time Time System	Renote Configu Configuring the Recording Schedule Camera: Camera1 Record	uration	
Covice Information Device Information Time Time System Network	Remote Configu Configuring the Recording Schedule Camera: Camera 1 Record	rration	×
Device Information Device Information Device Information Time System System Network M Network	Remote Configuring the Recording Schedule Camera: Camera 1 Record	and the second sec	×
Device Information Device Information Device Information Time System Network Network Output Settings Output Settings	Renote Configuring the Recording Schedule Camera: Camera 1 Record Record Type: Main Steam Recording Type: Main Steam	arition	×
Constant Strategy Constant Strategy Constant Strategy Constant Strategy Constant Strategy Constant Strategy Constant Strategy Constant Strategy Constant Strategy Constant Strategy	Renote Configuring the Recording Schedule Camera: Camera 1 Record Recording Schedule Elevent Advantion Recording Schedule Event Tamplath	drig	×
	Renote Config Configuring the Recording Schedule Camera: Camera 1 Record Recording Type: Itan Steam Recording Schedule Event Templata Recording Schedule	ding v eed Settings	×
Constant in the second se	Configuring the Recording Schedule Camera: Camera Camera 1 Record V Local Recording Schedule Recording Schedule: Vent Tamplata Recording Schedule: Vent Tamplata Advanta	ding v eed Settings	×
Constant Sector Constants Constant Sector Constants	Remote Configu Configuring the Recording Schedule Camera: Camera1 Record Camera1 Record Local Recording Type: Utain Stream Recording Schedule: Event Tamplate Advant	tration	×
	Configuring the Recording Schedule Camera: Record Record Recording Schedule User Tamplas Record Recording Schedule Event Continuous	Iration	×
	Configuring the Recording Schedule Camera: Record Record Recording Schedule User Template Recording Schedule Event Non Q + 2 + 4 + 6 & 10	ration	×
	Configuring the Recording Schedule Camera: Camera: Camera: Record Camera: Record Camera: Camera1 Recording Schedule Vent Template Vent Template Continuous	ration	×
Device Information Device Information Device Information Time System Orput Settings Output Settings Output Settings Storage Storage Mage Device Information Al-day Template Veekday Template Etvent Templata Template0	Configuring the Recording Schedule Camera: Camera: Camera: Record Camera: Record Camera: Camera1 Recording Schedule Vent Template Recording Schedule Vent Template Recording Schedule Vent Template Camera1 Recording Schedule Vent Template Camera1 Recording Schedule Vent Template Camera1 Recording Schedule Vent Template Recording Schedule Vent Template Recording Schedule Vent Template Camera1 Recording Schedule Vent Template Rec	ration	×
Device Information Device Information Device Information Time System Orput Settings Output Settings Output Settings Storage Storage Mage Device Information Al-day Template Veekday Template Event Template Storaptate Template01 Template02	Configuring the Recording Schedule Camera: Camera: Camera1 Record Camera1 Record Camera1 Recording Schedule Vent Template Recording Schedule Vent Template Recording Schedule Vent Template Camera1 Recording Schedule Vent Template Vent Vent Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q	rution drag ceed Settings , 12 , 14 , 16 , 18 , 20 , , 12 , 14 , 16 , 18 , 20 ,	×
	Configuring the Recording Schedule Carrera: Carrera: Carrera: Record Carrera: Record Carrera: Recording Schedule C	nation drag drag v v v v v v v v v v v v v	×
	Configuring the Recording Schedule Carrera: Carrera: Record Ical Recording Schedule Carrera: Carrera: Record Ical Recording Schedule Record Ical Recording Schedule Recording Schedule Ical Recording Schedule Recording Schedule Ical Recording Schedule Ical Recording Schedule Ical Recording Schedule Recording Schedule Ical Recording Schedule Ical Recording Schedule Ical Recording Sc	nation	×
	Configuring the Recording Schedule Carrera: Carrera: Record Itan Stream Record Itan Stream Recording Schedule Recording Schedule Continuous Itan Stream Continuous Itan Stream Continuous Itan Stream Ved 2 4 6 8 10 Tue 2 2 4 6 8 10 Tuu 2 2 4 6 8 10	nation	×
	Configuring the Recording Schedule Carrera: Carrera: Record Itan Stream Record Itan Stream Recording Schedule Recording Schedule Configuring the Recording Schedule Itan Stream Recording Schedule Itan Stream Recording Schedule Event Continuous Itan Stream Ved 2 4 6 8 10 Tru 0 2 4 6 8 10 Tru 0 2 4 6 8 10 Tru 0 2 4 6 8 10 Fri 0 2 4 6 8 10	ration drig drig 2 2 2 2 2 2 2 2 2 2 2 2 2	×
	Configuring the Recording Schedule Carrera: Ca	rration ding ding v v v v v v v v v v v v v	×
	Configuring the Recording Schedule Camera:	rration ting ting v v v v v v v v v v v v v v v v v v	×
Device Information Device Information Device Information Time System Output Settings Output Settings Output Settings Storage Methods Ytemplate Device Information Template01 Template03 Template04 Templ	Configuring the Recording Schedule Camera:	rizition dring cing v v v v v v v v v v v v v	×
Device Information Device Information Device Information Time System Output Settings Output Settings Storage Methods Storage Storage Storage Methods Template Veekday Template Veekday Template Event Template01 Template01 Template04 Template06 Template04 Template06 Template04 Te	Configuring the Recording Schedule Camera:	rizition eting eting eting 2 Partic Alarm 2 Partic Alarm	×

© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: support@hikvision.com • www.hikvision.com





Title:	How to configure Local Recording	Version:	v1.0	Date:	11/09/2018
Product:	DS-PEA Series Emergency Alarm Device			Page:	4 of 6

4. Configure zone setting, select Zone Setting—Other---Recording Linkage.

		Remote Configuration			
- Revice Information	Configuring the Zone Para	ameters			
Device Information	Basic Settings				
🎡 Time					
+ 💰 System	Zone Name	Zone Type	Sensitivity	Siren Output	Settings
🗄 🚳 Network	1 Alarm In	Shield Zone	500ms	Close	2
- 💰 Input Settings	2 Alarm In	Shield Zone	500ms	Close	2
Zone	3 Emergency Call H	lelp Shield Zone	500ms	Close	Ø
🗄 💰 Output Settings					\mathbf{x}_1
- 🗞 Storage	🚵 Zone Sett	tings		×	
i General	Zone No.:	3			
File	Name:	Emergency Ca	ll Help		
🗉 🚳 Image	Detector Type:	Emergency Sw	itch 🗸		
- 🗞 Event	Zone Type:	Panic Alarm Zo	ne 🗸		
Schedule	Sensitivity:	500ms	~		
+ 🕐 Alarm Management	Tampering Type:	Disable	~		
	Audio File:	Ringtone 2	7		
		J Upload Ala	rm Recovery Report		
	Linked Siren Alarm Lan	np Linkage Linked Trigge	r Other	•	
	Select All			2	
	Recording Linkage				
	5				
	Copy To	Sav	e Car	icel	

5. Press on the panic button, 4200 will trigger Pop-out image. Answer the calling.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>





Title:	How to configure Local Recording	Version:	v1.0	Date:	11/09/2018
Product:	DS-PEA Series Emergency Alarm Device			Page:	5 of 6

6. After ending the calling, you can see video in playback interface or download video in Storage—File—All types.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved.

No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>





Title:	How to configure Local Recording	Version:	v1.0	Date:	11/09/2018
Product:	DS-PEA Series Emergency Alarm Device			Page:	6 of 6

First Choice for Security Professionals *HIKVISION* Technical Support